BR70

Indicator

Weight tare indicator with counting function and printer

PCS | CHECK | RS232 | RS232 | BAT INT | AC/DC | IP54 | NO VERIF

FEATURES:

- Weight tare indicator with counting function and printer.
- ABS housing. IP54 Protection.
- Waterproof keyboard with 7 function keys.
- Backlight LCD display with 6 digits of 24 mm.
- Functions indication on the display.
- ABS support column.
- Up to 4 load cells de 350 Ω.
- Operating temperature range: 0ºC +40ºC.
- Power supply with adaptor AC/DC 230Vac 50Hz.
- Internal battery 6V/4Ah.
- RS232 output with PC and printer format.
- Units: kg/lb/oz.
- 15.000 not approved divisions.
- External calibration.

KEYBOARD FUNCTIONS:

- To print or to send data, Function/Piece counting, unitary weight - total weight – Number of pieces, Tare, Zero, Units.


FUNCTIONS:


- Accumulation
- Gross/Net
- Zero
- Tare
- Counting
- Weight control

PRINTING:

- Normal printing with: Ticket number. Gross. Tare.
- Accumulation printing with: Ticket number. Accumulated weight.
- Printing Counting: Gross weight. Unit weight. Number of pieces.
- Paper specifications: Paper width: 60 mm Printing width: 48 mm.



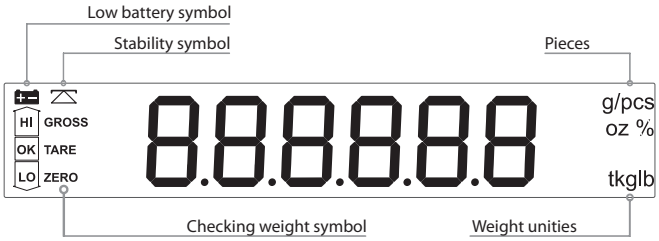

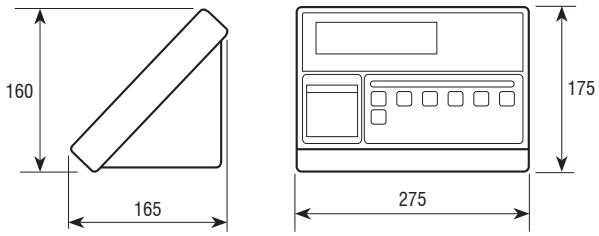

Dimensions (mm)



Rear view

Code #	Description	Packing dimensions (mm)	Packing weight (kg)
260197	Weight tare indicator with counting function and printer	330x260x210	2,2

Accessories

Code #	Accessories description
910112	Stainless steel column (600 mm) with aluminium fixation base
910029	Stainless steel column (300 mm) with painted fixation base
910030	Stainless steel column (300 mm) with painted fixation base
910031	Stainless steel column (300 mm) and fixation base
910016	Adapter from wall to column
260469	Steel repeater with digits of 80 mm
260708	Steel repeater with digits of 130 mm
260470	Stainless steel repeater with digits of 80 mm