


Hanging scale KERN HDB-XL

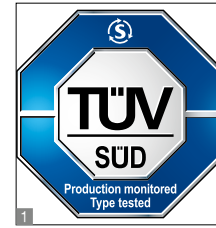

User-friendly hanging scale for rapid, mobile weighing

Features

- The larger design creates space for a large handle, which enables even better handling especially with heavier loads
- **1** With the TÜV certification mark, the scales meet the requirements of the standard EN 13155 (Non-fixed load lifting attachments/ Breakage resistance) and EN 61010-1 (Electrical safety)
- Ideal for rapid control in goods-in and goods-out
- Also essential in the private sector to determine the weight of fish, game, fruits, bicycle parts, suitcases etc.
- Hold function: For easy reading of the weighing result, the display can be “frozen” in different ways. Either automatically when the weighing value remains unchanged or manually by pressing the Hold key
- Peak load display (peak hold)
- Hook, steel, can be hinged

Technical data

- LCD display, digit height 12 mm
- Ready for use: Batteries included, 2x1.5 V AAA, operating time up to 180 h
- Further weighing units: kg, lb, N
- Permissible ambient temperature 5 °C/35 °C

Accessories

- **2** Tare pan with pan beam, details see Accessories, KERN CH-A01N

STANDARD



OPTION



Model	Weighing capacity [Max] kg	Readability [d] g	Dimensions housing W×D×H mm	Net weight approx. kg	Option	
					DAkkS Calibr. Certificate	
KERN					DAkkS KERN	
HDB 6K-3XL	6	5	107×25×101	0,20	963-128H	
HDB 10K-2XL	15	10	107×25×101	0,20	963-128H	
HDB 30K-2XL	30	20	107×25×101	0,20	963-128H	

Pictograms

Internal adjusting: Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)	KERN Communication Protocol (KCP): It is a standardized interface command set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems	Suspended weighing: Load support with hook on the underside of the balance
Adjusting program CAL: For quick setting up of the balance's accuracy. External adjusting weight required	GLP/ISO log: The balance displays serial number, user ID, weight, date and time, regardless of a printer connection	Battery operation: Ready for battery operation. The battery type is specified for each device
Easy Touch: Suitable for the connection, data transmission and control through PC or tablet.	GLP/ISO log: With weight, date and time. Only with KERN printers.	Rechargeable battery pack: Rechargeable set
Memory: Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.	Piece counting: Reference quantities selectable. Display can be switched from piece to weight	Universal plug-in power supply: with universal input and optional input socket adapters for A) EU, CH, GB; B) EU, CH, GB, USA; C) EU, CH, GB, USA, AUS
Alibi memory: Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard.	Recipe level A: The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out	Plug-in power supply: 230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available
Data interface RS-232: To connect the balance to a printer, PC or network	Recipe level B: Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display	Integrated power supply unit: Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request
RS-485 data interface: To connect the balance to a printer, PC or other peripherals. Suitable for datatransfer over large distances. Network in bus topology is possible	Totalising level A: The weights of similar items can be added together and the total can be printed out	Weighing principle: Strain gauges: Electrical resistor on an elastic deforming body
USB data interface: To connect the balance to a printer, PC or other peripherals	Percentage determination: Determining the deviation in % from the target value (100 %)	Weighing principle: Tuning fork: A resonating body is electromagnetically excited, causing it to oscillate
Bluetooth* data interface: To transfer data from the balance to a printer, PC or other peripherals	Weighing units: Can be switched to e.g. nonmetric units. See balance model. Please refer to KERN's website for more details	Weighing principle: Electromagnetic force compensation: Coil inside a permanent magnet. For the most accurate weighings
WiFi data interface: To transfer data from the balance to a printer, PC or other peripherals	Weighing with tolerance range: (Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model	Weighing principle: Single cell technology: Advanced version of the force compensation principle with the highest level of precision
Control outputs (optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.	Hold function: (Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value	Verification possible: The time required for verification is specified in the pictogram
Analogue interface: to connect a suitable peripheral device for analogue processing of the measurements	Protection against dust and water splashes IPxx: The type of protection is shown in the pictogram.	DAKkS calibration possible (DKD): The time required for DAKkS calibration is shown in days in the pictogram
Interface for second balance: For direct connection of a second balance		Factory calibration (ISO): The time required for Factory calibration is shown in days in the pictogram
Network interface: For connecting the scale to an Ethernet network		Package shipment: The time required for internal shipping preparations is shown in days in the pictogram
		Pallet shipment: The time required for internal shipping preparations is shown in days in the pictogram

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under license. Other trademarks and trade names are those of their respective owners.

KERN – Precision is our business

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAKkS calibration certificate the best pre-requisite for proper balance calibration.

The KERN DAKkS calibration laboratory today is one of the most modern and best-equipped DAKkS calibration laboratories for balances, test weights and force-measurement in Europe.

Thanks to the high level of automation, we can carry out DAKkS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.

Range of services:

- DAKkS calibration of balances with a maximum load of up to 50 t
- DAKkS calibration of weights in the range of 1 mg - 2500 kg
- Volume determination and measuring of magnetic susceptibility (magnetic characteristics) for test weights
- Database supported management of checking equipment and reminder service
- Calibration of force-measuring devices
- DAKkS calibration certificates in the following languages DE, EN, FR, IT, ES, NL, PL
- Conformity evaluation and reverification of balances and test weights

Your KERN specialist dealer: